

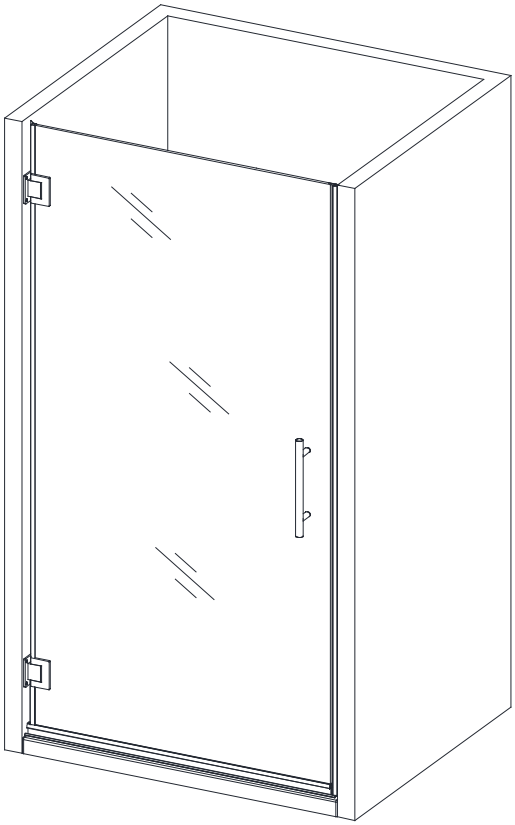


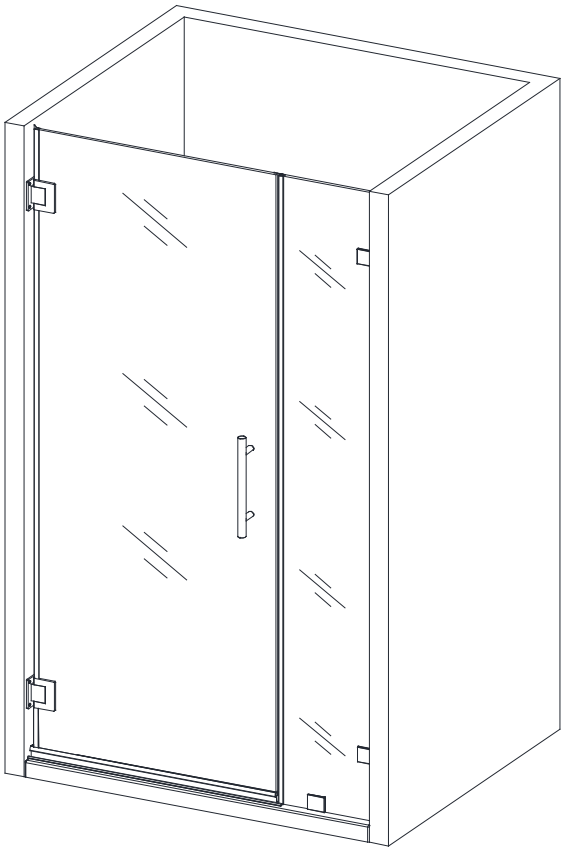

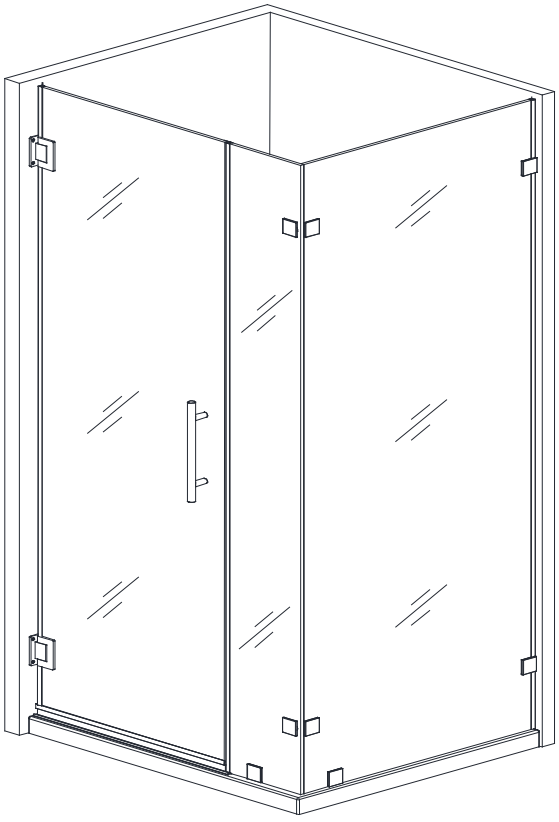

MK HINGE SHOWER DOOR

INSTALLATION INSTRUCTIONS

VERSION 1.0

PREPARATION FOR INSTALLATION

READ ALL INSTRUCTIONS BEFORE UNPACKING THE PRODUCT

CAUTION! **TWO PERSON LIFT REQUIRED**

2 PEOPLE ARE REQUIRED TO LIFT AND DURING ENTIRE INSTALLATION OF THIS PRODUCT

We reserves the right to change, update, modify, alter, redesign this manual/product or its policies without prior notice!
It is your responsibility to visit website to download or contact customer service for the most updated version of the installation instructions.

shall not be liable for any injuries or property damages in connection with this product during installation or use of this product!

IMPORTANT UNPACKING INSTRUCTIONS:

When you have open top carton box lid, do not take shower glass doors or panels out before you read this and have this items in place. Have a soft cloth blanket min ¼" thick and make sure cloth blanket is bigger then your glass doors or panels in your working area place. Set this soft cloth blanket on the floor of working area. Take out shower glass doors or panels out from the Carton box and set it on the soft cloth blanket. Do not lean it on the wall or floor without the soft cloth blanket.

ATTENTION! Never set glass on floor or tile or solid floor or wall surface without a soft cloth blanket if you set it without soft cloth blanket it will cause scratches to the tempered glass and this will cause it to shatter right away or when installed or when you start using it, improper handling causes scratches on the glass doors or panels. When installing glass doors or panels be sure your have inspected glass doors or panels fully before installing it. Do not install and Stop installation if you see or find scratches or chipped corners on your glass doors or panels. NEVER set glass doors or panels on its corners make sure the your floor is level with the soft cloth blanket when preparing glass doors or panels for installation.

After opening all boxes and packages, read this introduction carefully. Check that all of the needed parts are included in the package by checking all the components on the diagram of components. Examine boxes and packages for shipping damage. If the unit has been damaged or missing parts, please contact our customer support department immediately. Please note that we will not replace any damaged products or missing parts after 2 business days of the order receipt.

VERY IMPORTANT! Double check all glass corners and four edges of all glass door and panels to make sure that all the glass are in perfect condition and without any scratches or chipped corners. Do not try to install the shower door, if there is any scratches or chipped corners. Note, that you should consult your local building codes with questions on installation compliance standards. Building and plumbing codes may vary from state to state and location. We is not responsible for code compliance standards for your project and will not accept any returns. Prior to installation, ensure that the installation surface is leveled and solid, and will be able to support the total weight of the unit. Also, make sure the walls are at the right angles. Irregular installation surface level or improper angle of side walls will result in serious problems during installation. Note, that some adjustments and drilling will be necessary during the installation process.

VERY IMPORTANT! Installation of this extremely heavy product to the wall requires minimum of 2" x 4" wood stud framing behind the wall.


INSTRUCTIONS THAT, IF IGNORED COULD RESULT IN SERIOUS INJURY OR DEATH CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT.
THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION!

LICENSED AND INSURED PROFESSIONAL CONTRACTOR IS REQUIRED TO INSTALL THIS PRODUCT INCLUDING ASSISTANCE OF A SECOND PERSON DURING INSTALLATION

No modifications to the product are allowed. Modifications of any types to the product will result in serious injuries or may cause death.

IMPORTANT: Do not install the handle on to the glass door until the instruction tells you to do so. Never lift the glass using the handle. Failure to do so will result in serious personal injury and could cause damages to the glass. Professional graded glass suction cups are highly recommended while handling extremely heavy glass. This product must be installed on a finished threshold and against finished walls only. This product is intended for residential use only.


TOOLS REQUIRED

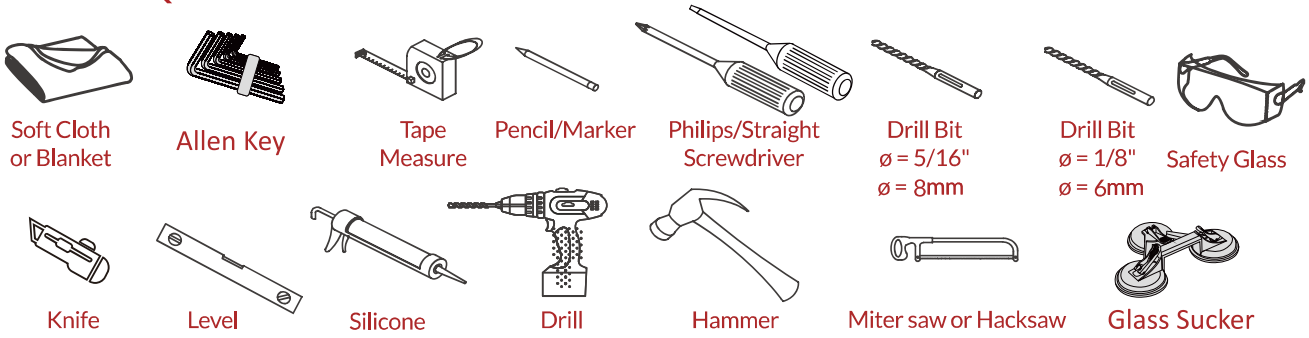

OTHER TOOLS MAY BE REQUIRED

DOOR+FRONT GLASS+RUTURN PANEL

SHOWER DOOR COMPONETS

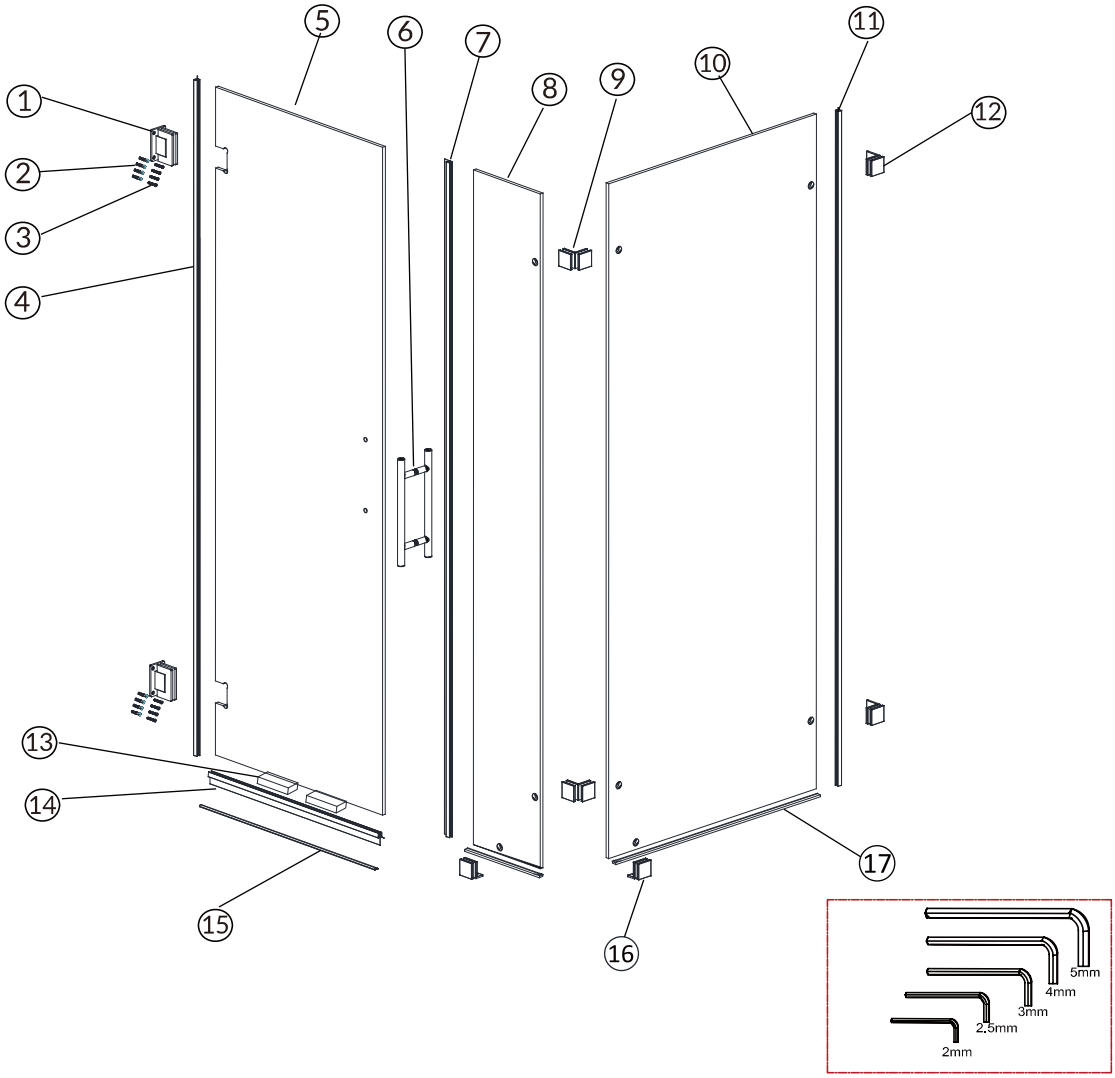

Item#	Description	Qty
1	Hinge	2pcs
2	Screw ST4*40	12pcs
3	Wall Plug	12pcs
4	Side Anti-water Strip on Door	1pc
5	Glass Door	1pc
6	Handle	1pc
7	“h” Type Closed Watertight Strip	1pc
8	Front Fixed Glass	1pc
9	Bracket for Glass to Retrun Panel	1pc
10	Return Panel Glass	1pc
11	Wall Side Anti-water Strip	1pc


Item#	Description	Qty
12	Glass Bracket to Wall	2pcs
13	Wood Shim	2pcs
14	Anti-water Strip Under Door	1pc
15	Aluminum Threshold	1pc
16	Glass Bracket on Floor	2pcs
17	3M Strip Under Glass	2pcs

This door has NO out-of-plumb adjustment

DOOR+FRONT FIXED GLASS+RUTURN PANEL


SHOWER DOOR COMPONETS

1.Measure the distance for return panel and door side to chose right size shower door.

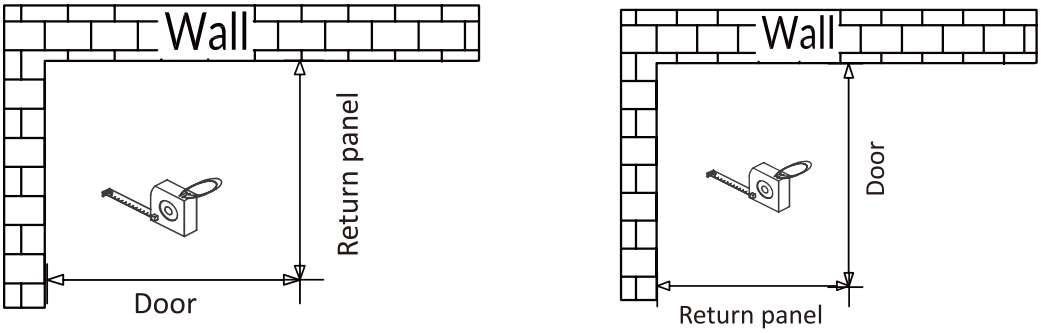


2.Install Return Panel


a

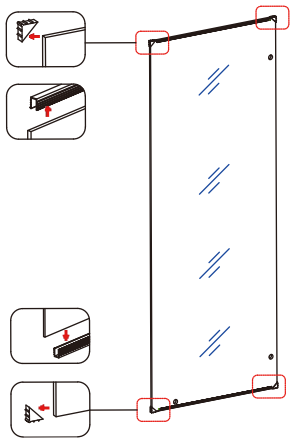


b

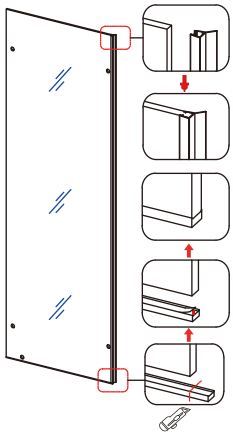

c

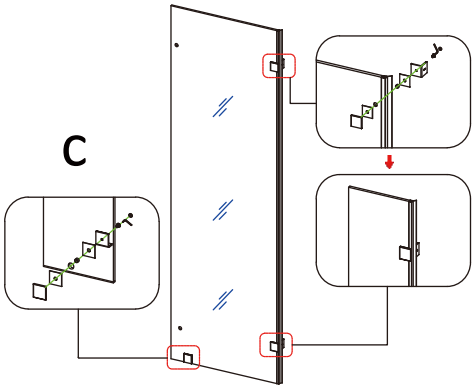

d

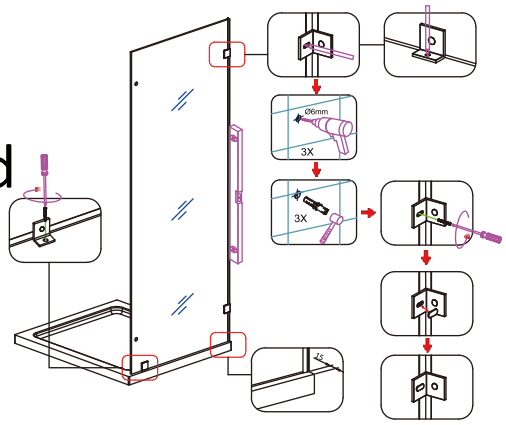


DOOR+FRONT FIXED GLASS+RUTURN PANEL


SHOWER DOOR COMPONETS

3.Install Front Fixed Glass


a

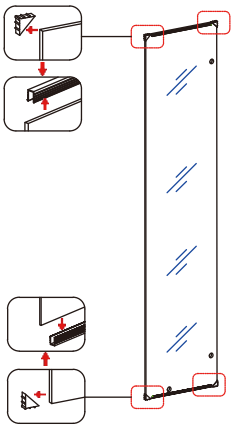


b

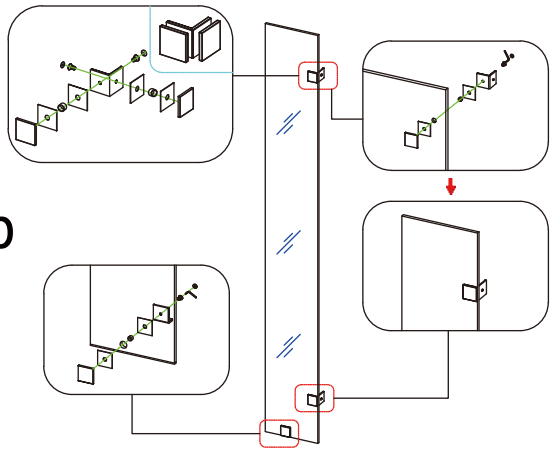

c

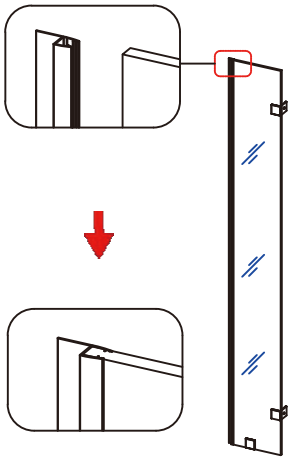


d

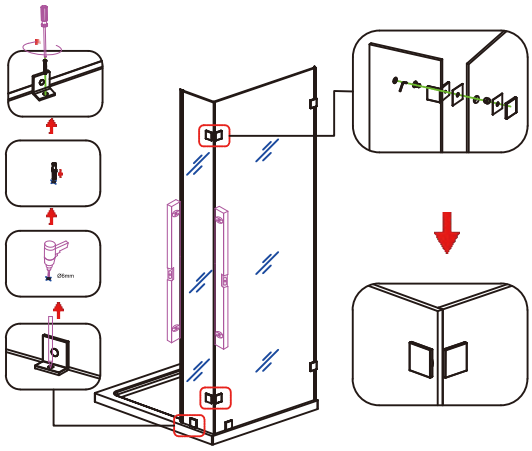


4.Install Door Glass

a

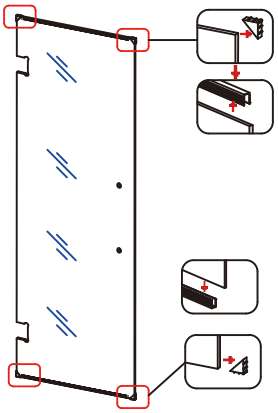

b

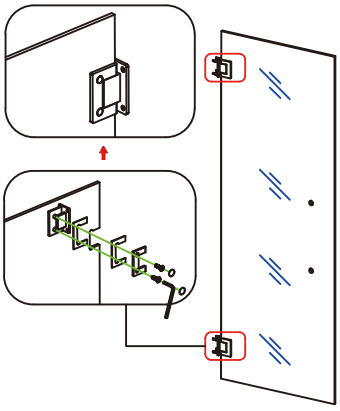



DOOR+FRONT FIXED GLASS+RUTURN PANEL

SHOWER DOOR COMPONETS

3.Install Front Fixed Glass


a

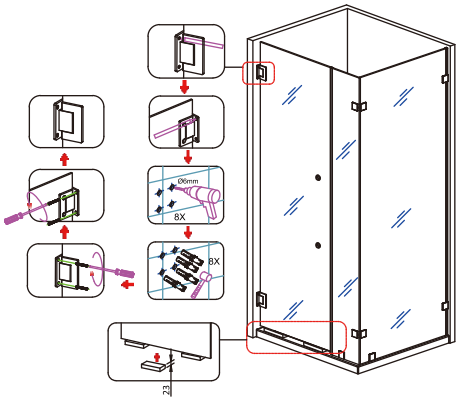

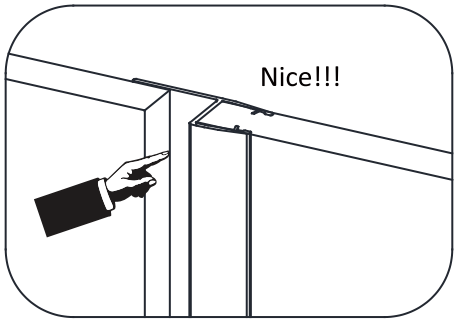


4.*Install Handle and Seal Under Glass*

a

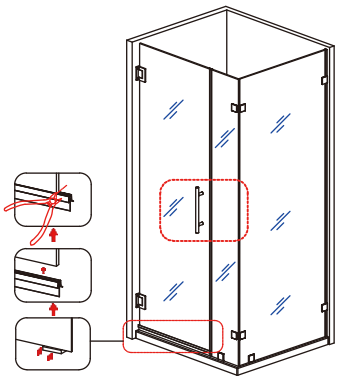


b

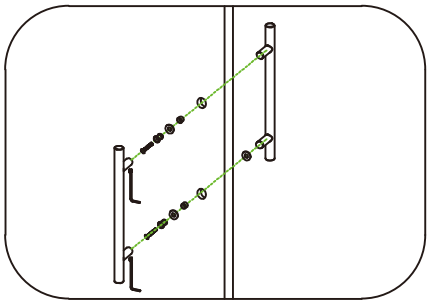


4.Install Aluminum Threshold and Silicone

a

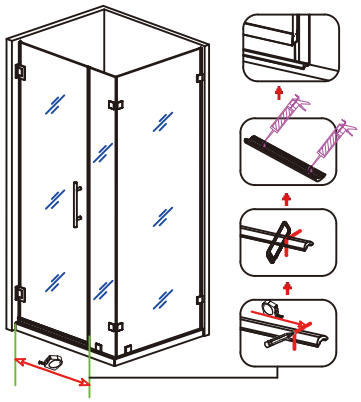


b

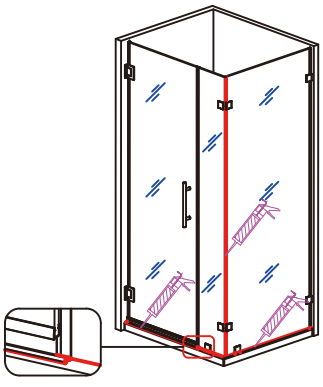




DOOR+FRONT FIXED GLASS

SHOWER DOOR COMPONETS

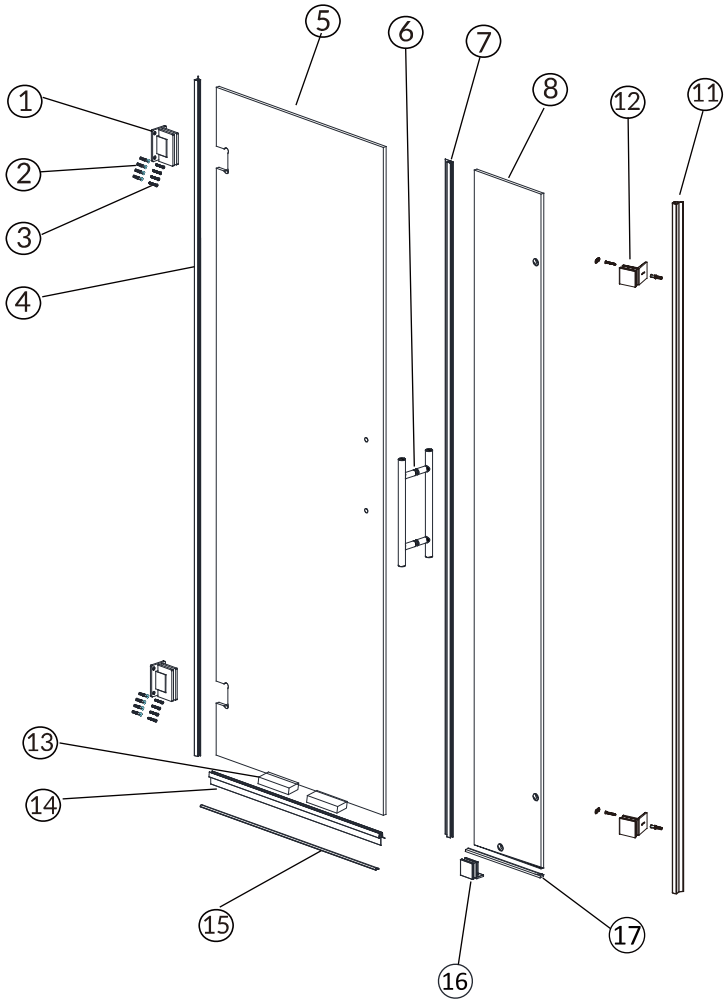

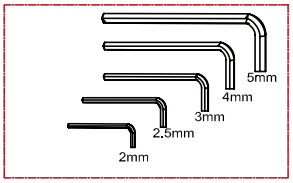

Item#	Description	Qty
1	Hinge	2pcs
2	Screw ST4*40	11pcs
3	Wall Plug	11pcs
4	Side Anti-water Strip on Door	1pc
5	Glass Door	1pc
6	Handle	1pc
7	“h” Type Closed Water tight Strip	1pc
8	Front Fixed Glass	1pc
9		
10		
11	Wall Side Anti-water Strip	1pc


Item#	Description	Qty
12	Glass Bracket to Wall	2pcs
13	Wood Shim	2pcs
14	Anti-water Strip Under Door	1pc
15	Aluminum Threshold	1pc
16	Glass Bracket on Floor	2pcs
17	3M Strip Under Glass	2pcs

This door has NO out-of-plumb adjustment

DOOR+FRONT FIXED GLASS


SHOWER DOOR COMPONETS

1.***Measure the distance for wall to wall to chose right size shower door.***

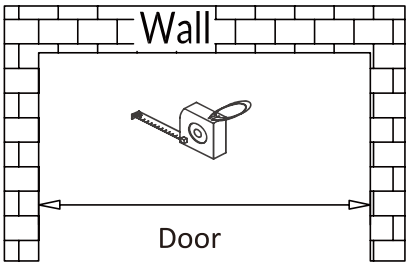


2.Install Front Fixed Glass.


a

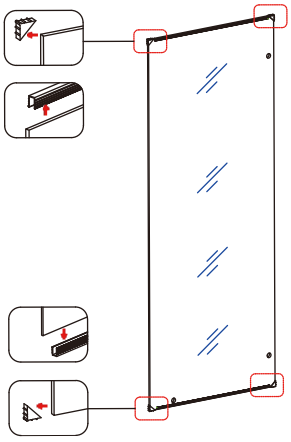


b

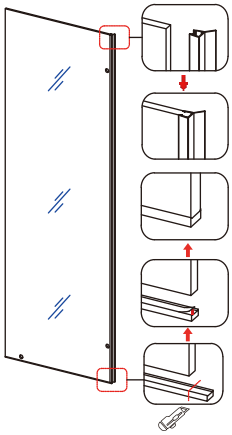

c

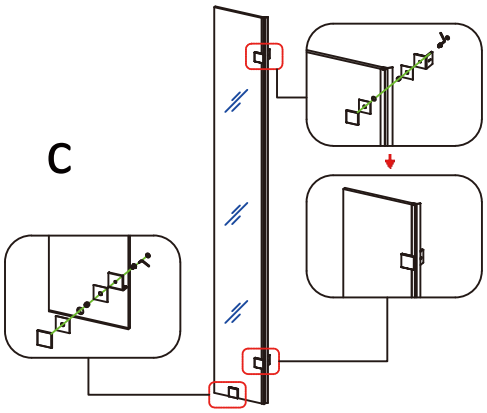

d

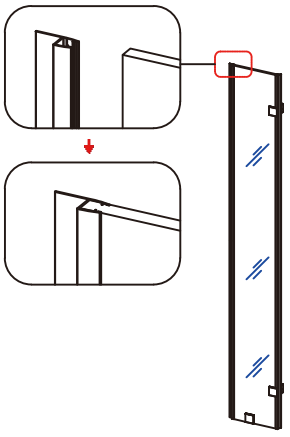


DOOR+FRONT FIXED GLASS


SHOWER DOOR COMPONETS

3.Install Door Glass and Handle.


a

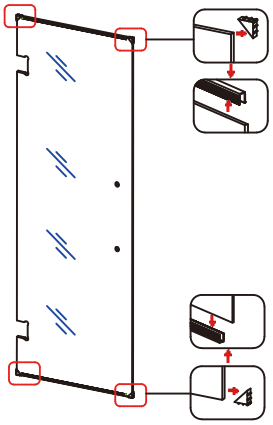


b

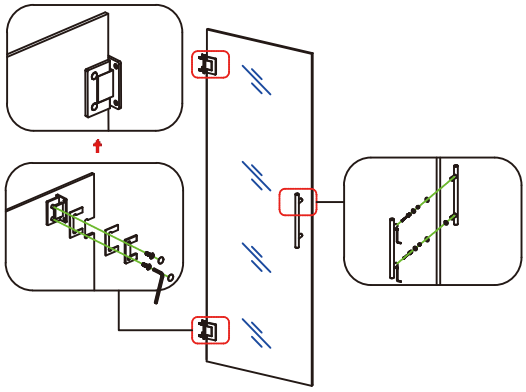


c

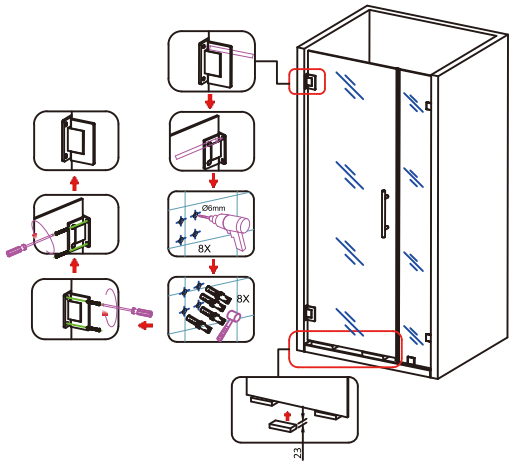

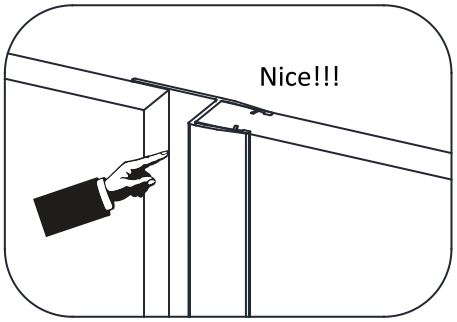


4.Install Aluminum Threshold and Silicone

a

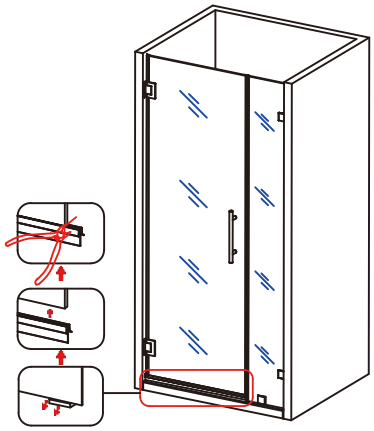


b

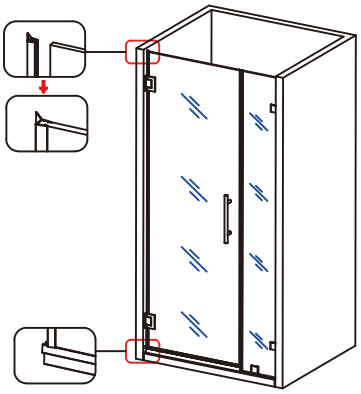


DOOR+FRONT FIXED GLASS

SHOWER DOOR COMPONETS

c

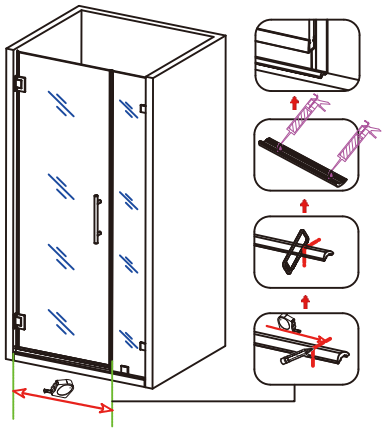


d

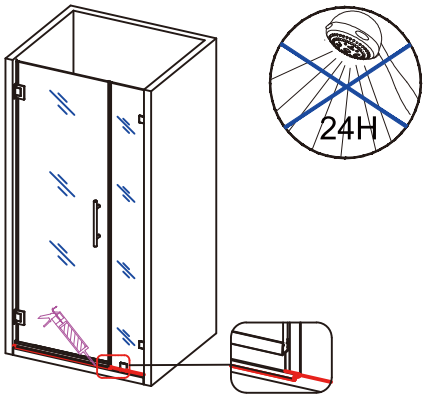


Only DOOR

SHOWER DOOR COMPONETS

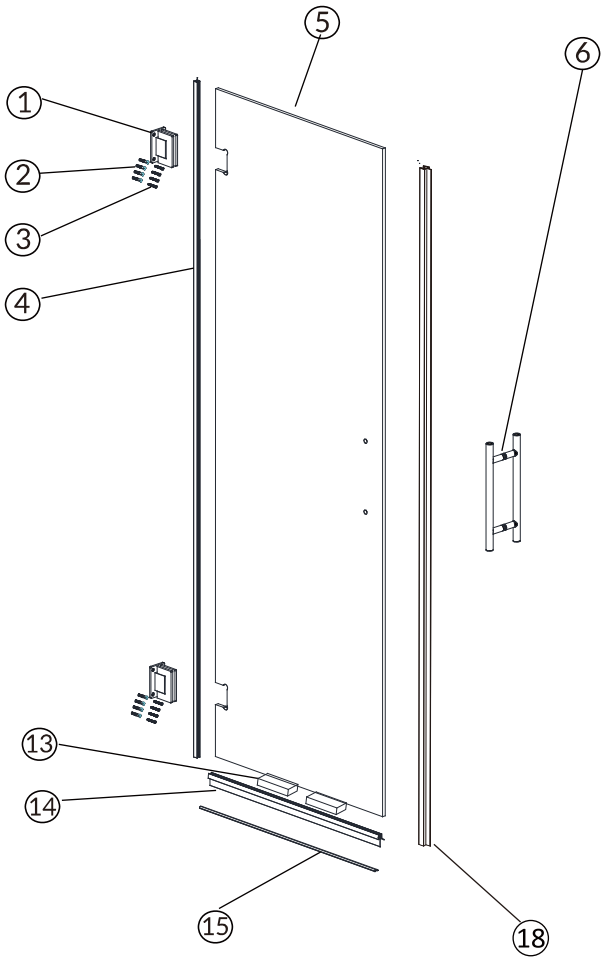

Only DOOR

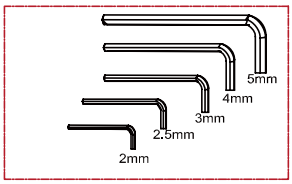

Item#	Description	Qty
1	Hinge	2pcs
2	Screw ST4*40	11pcs
3	Wall Plug	11pcs
4	Side Anti-water Strip on Door	1pc
5	Glass Door	1pc
6	Handle	1pc
7		
8		
9		
10		
11		


Item#	Description	Qty
12		
13	Wood Shim	2pcs
14	Anti-water Strip Under Door	1pc
15	Aluminum Threshold	1pc
16		
17		
18	Closed Water tight Strip	1pc

This door has NO out-of-plumb adjustment

Only DOOR


SHOWER DOOR COMPONETS

1.***Measure the distance for wall to wall to chose right size shower door.***

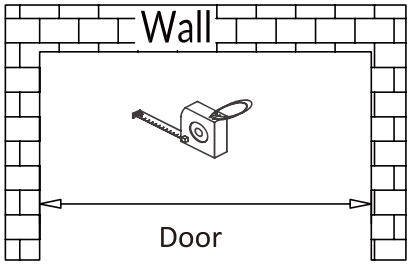


2.Install Door Glass and Handle.


a

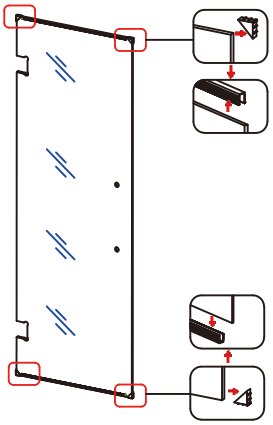


b

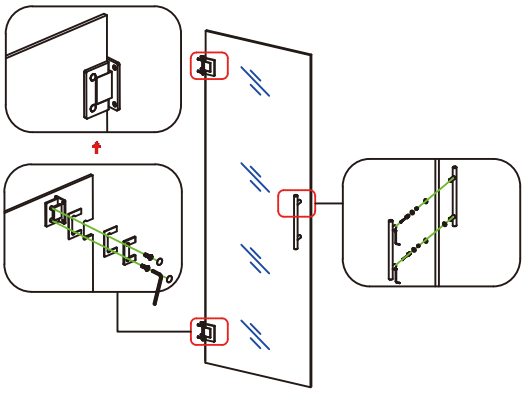

c

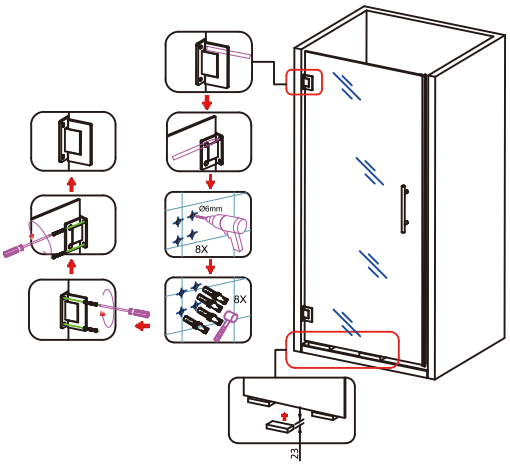

d

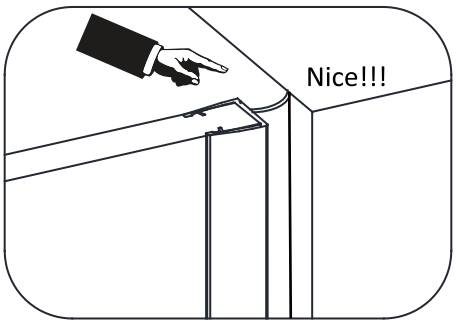


Only DOOR


SHOWER DOOR COMPONETS

3 .Install Aluminum Threshold and Silicone


a

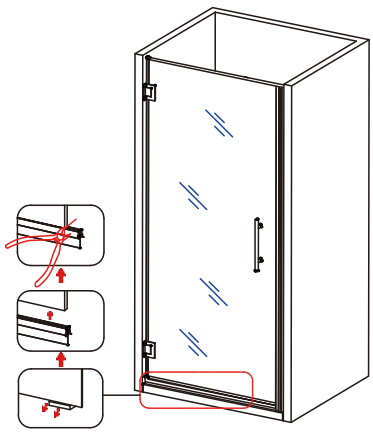


b

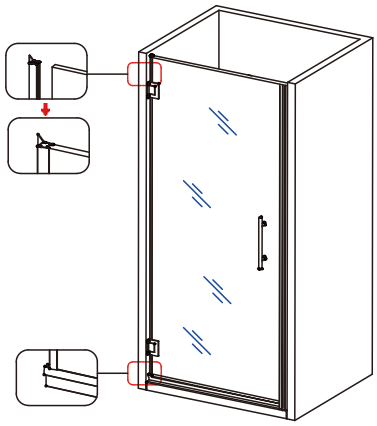

a

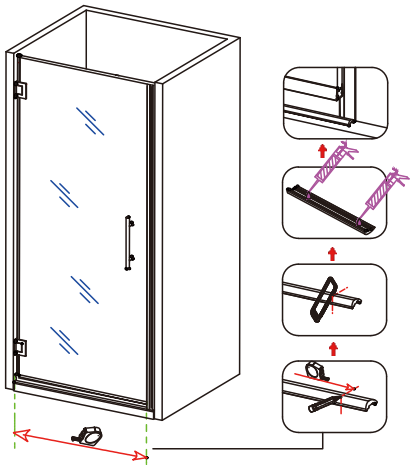

b

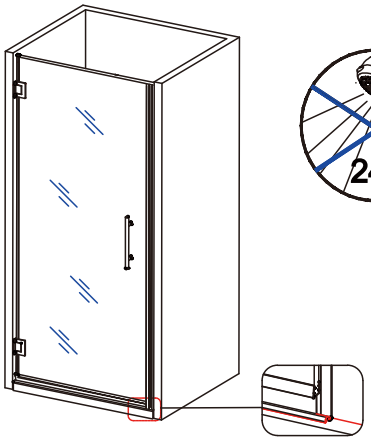

IMPORTANT!

DO NOT USE: Abrasive cleaners such as: acid, ammonia, bleach, and simmilar solutions; or any types of baking soda cleaning solutions.Use of such solutions may cause corrosion, finish peeling, and/or dull the surface.

DO NOT USE: Abrasive sponges or cloth. Never use steel, wool, or wired brushes that will permanently scratch the surface.

After installation use the shower door for approximately 2-3 weeks or 20-25 times (whichever comes first). Be sure to re-inspect all screws, make sure they are tight and tighten them if necessery. Repeat this adjustments when necessary.

When opening and closing the glass door. Be sure not to slam it. Always, open or close the glass door gently. Never slam the shower door against glass shower enclosure panel or wall. Slaming the glass door will cause immediate shattering and will cause personal injury or death.

Never leave kids unattended. Be sure to explain safety rules and train kids how to use the shower door to prevent any injuries or death. It is very important to inform all family members living with you about this safety operation instructions.