
INSTALLATION INSTRUCTIONS

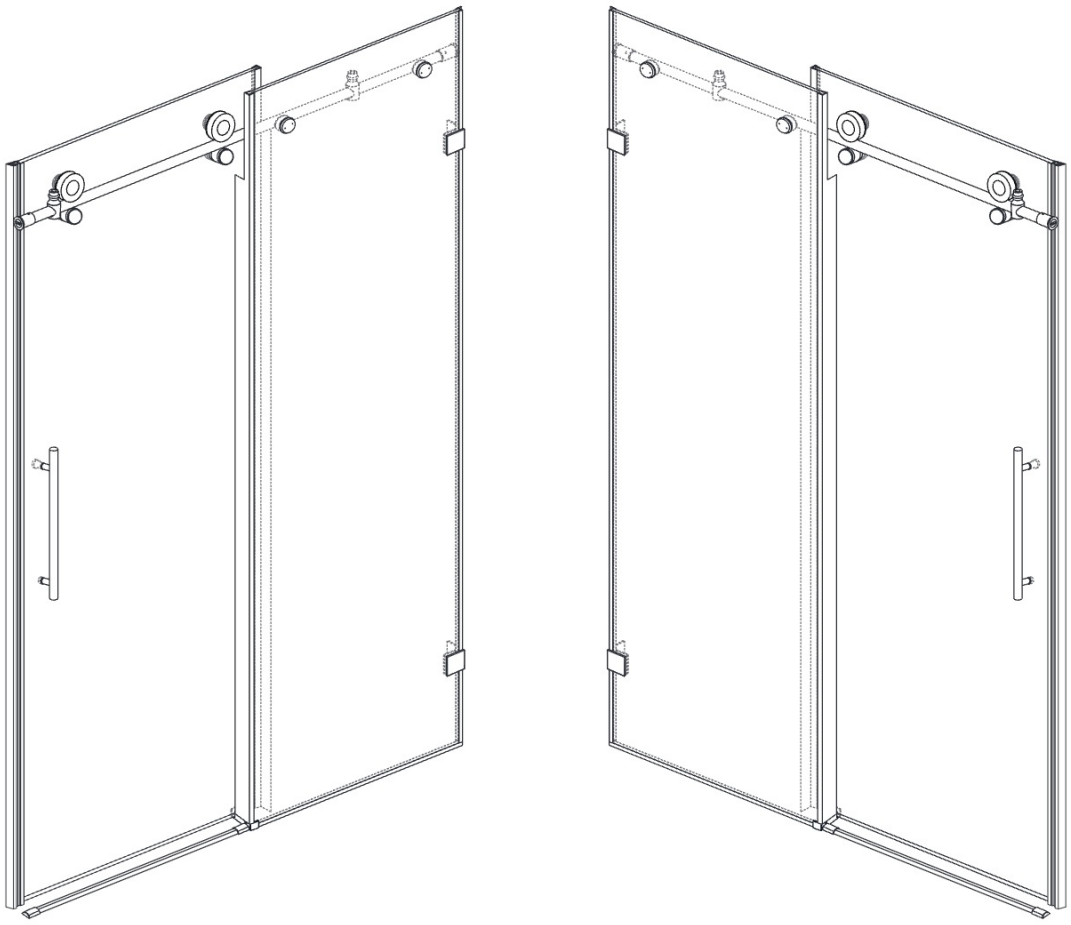

◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted.Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.


Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.
Note: This product is heavy and may require two people to install.


Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.
Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.
Please keep these instructions for aftercare and customer service details.

Tools Required

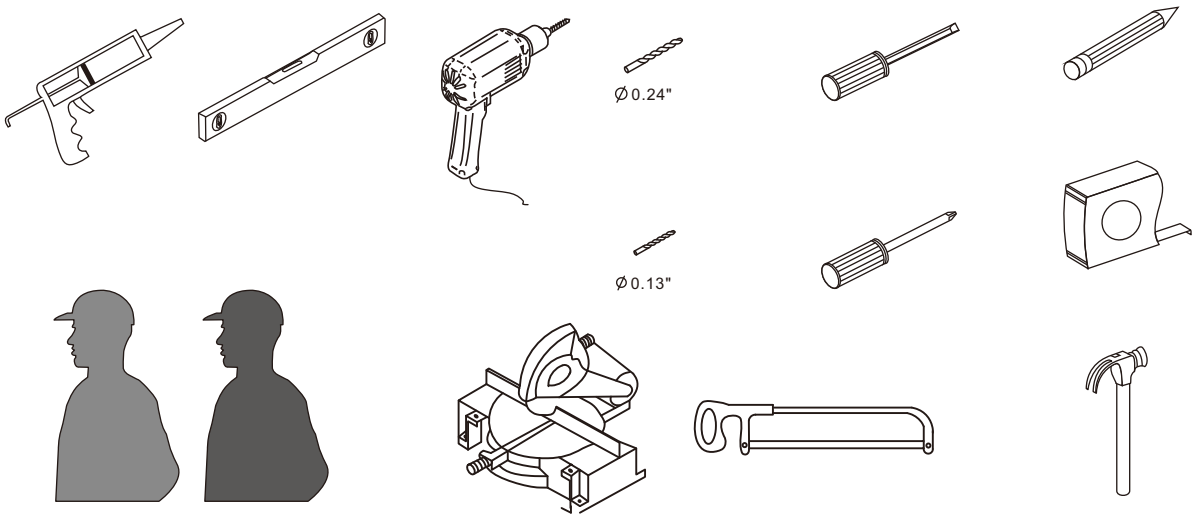


This product is heavy and may require two people to install.




Reverse Door opening

This shower door can be assembled so that the sliding door opens from Left to Right, or Right to Left. The drawings below illustrate the shower door opening from Left to Right.



Note the location of the fixed glass panel for the shower door opening from Left to Right.

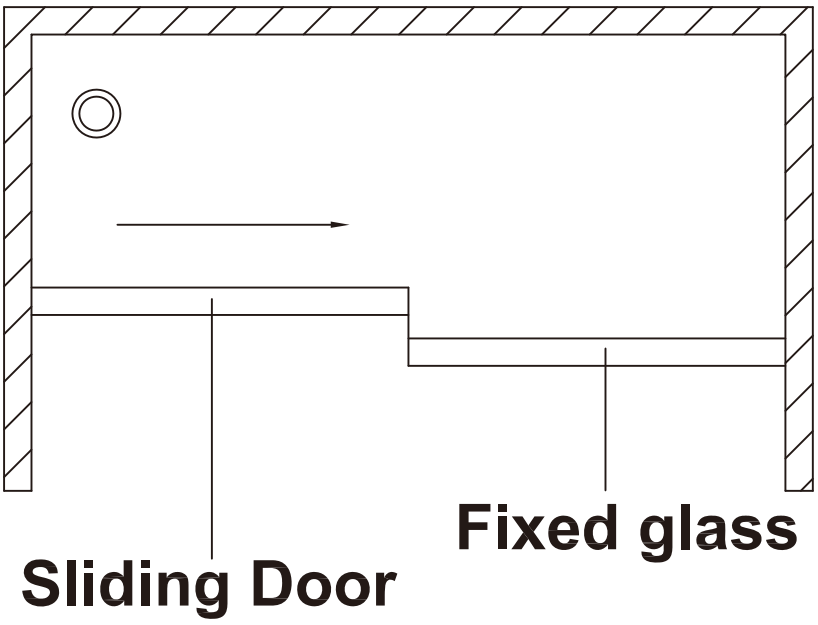

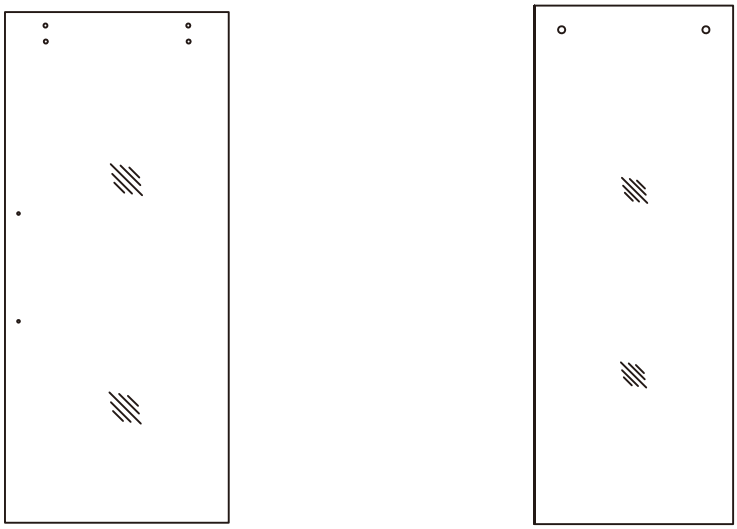


If you wish to install the door opens from Right to Left. Flip the top rail installation so that the Fixed Glass (3) is on the left when installed.

◆ Box Contents:

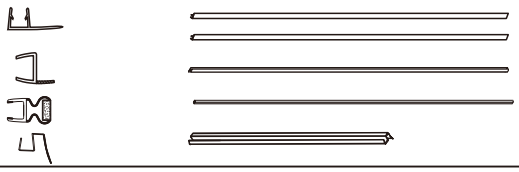1xInstallation Instruction.	
[1] 2xWall Brackets: [1A] 2xWall Plugs. [1B] 2xWall Brackets. [1C] 2xScrews ST4x40. [1D] 2x0.12" Allen Key.	
[2] 1xTop Bar with Fasteners. [2A] 1xTop Bar. [2B] 2xFasteners.	
[3] 1xBottom Guide. [3A] 1xBottom Guide. [3B] 1xShim. [3C] 1xScrew Caps. [3D] 1xScrewSt4X25. [3E] 1xWall Anchors.	
[4] 1xPost.	
[5] 2xHinges	
[6] 1xU Channel.	
[7] 1xAluminum Seal.	
[8] 2xAluminum Seal Caps.	
[9] 1xHandle Set.	
[10] 2xRollers.	
[11] 1xStoppers.	
[12] 1x 0.1" Allen Key. [13] 1x 0.16" Allen Key. [14] 1x 0.2" Allen Key.	
[15] 2xSide Gaskets. [16] 1xWall Gasket. [17] 1xMagnetic Seal. [18] 1xBottom Door Gasket.	
[19] 4xU Channel Shims.	
[20] 1xDoor Panel.	
[21] 1xFixed Panel .	
[22] 2xAnti-jumps.	


◆ Assembly Drawing

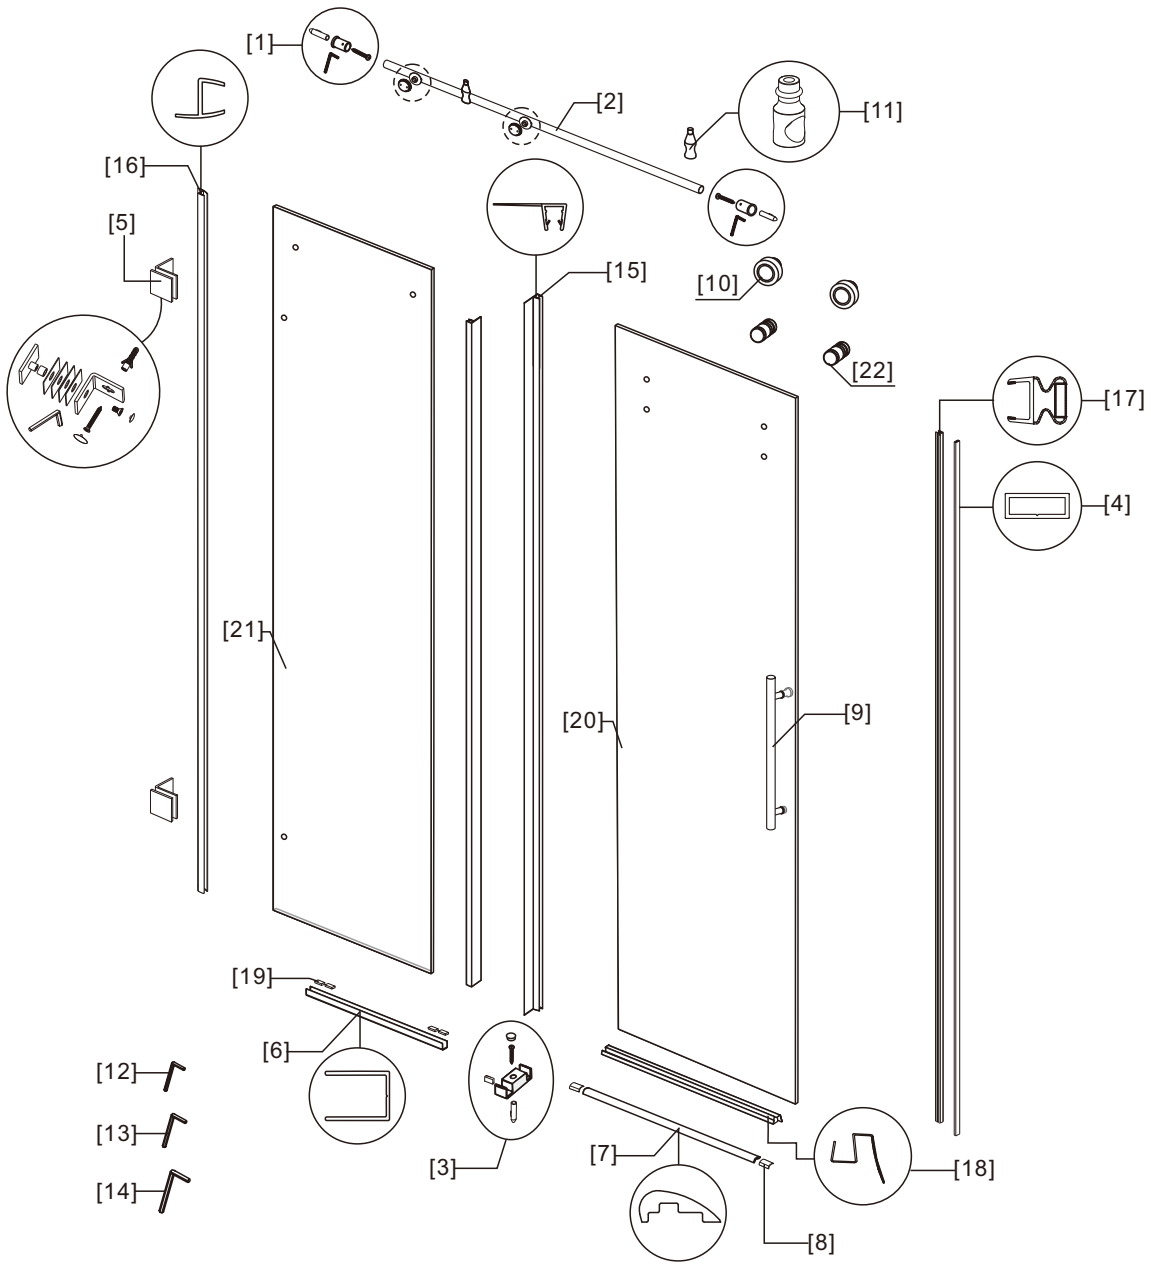



[1] 2xWall Brackets.
[2] 1xTop Bar with Fasteners.
[3] 1xBottom Guide.
[4] 1xPost.
[5] 2xHinges.
[6] 1xU Channel.
[7] 1xAluminum Seal.
[8] 2xAluminum Seal Caps.
[9] 1xHandle Set.
[10] 4xRollers.
[11] 1xStoppers.
[12] 1x0.1" Allen Key.
[13] 1x0.16" Allen Key.
[14] 1x0.2" Allen Key.
[15] 2xSide Gaskets.
[16] 1xWall Gasket.
[17] 1xMagnetic Seal.
[18] 1xBottom Door Gasket.
[19] 4xU Channel Shims.
[20] 1xDoor Panel.
[21] 1xFixed Panel .
[22] 2xAnti-jumps.

◆ Installation Steps


Step 1

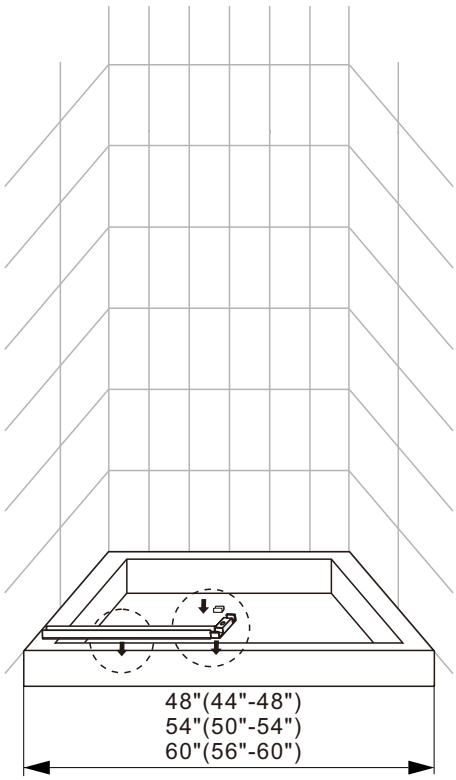

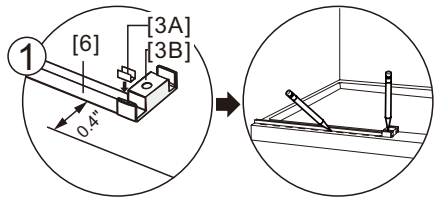


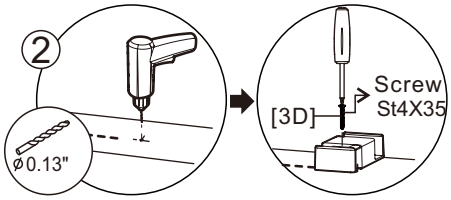


OR

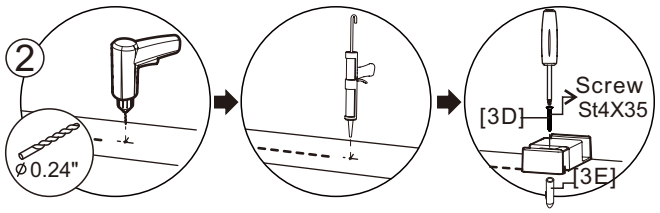


If the shower enclosure is installed on the floor directly, use 0.24" bit to drill the hole and a Wall Anchor [3E] is needed.

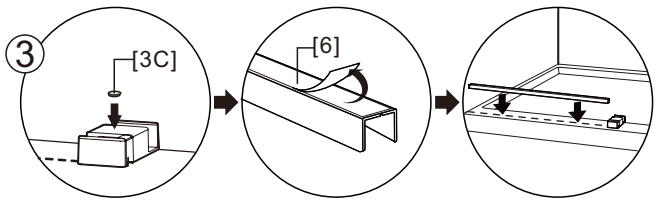


Step 2

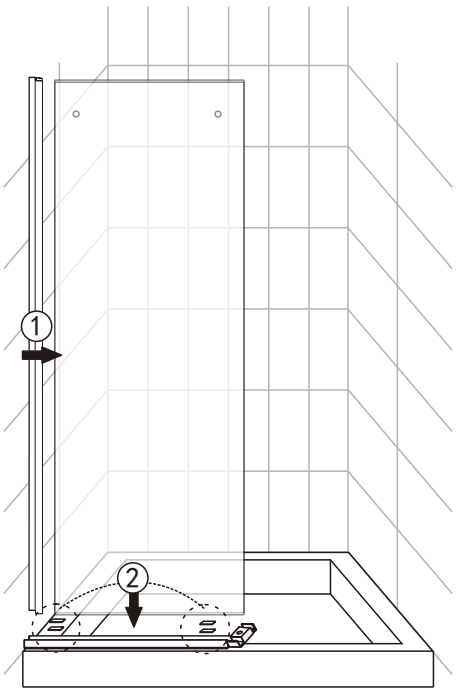


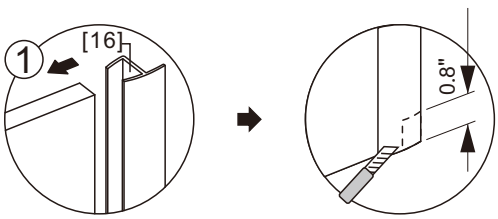


View from inside

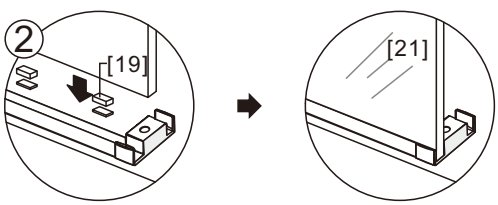


Step 3

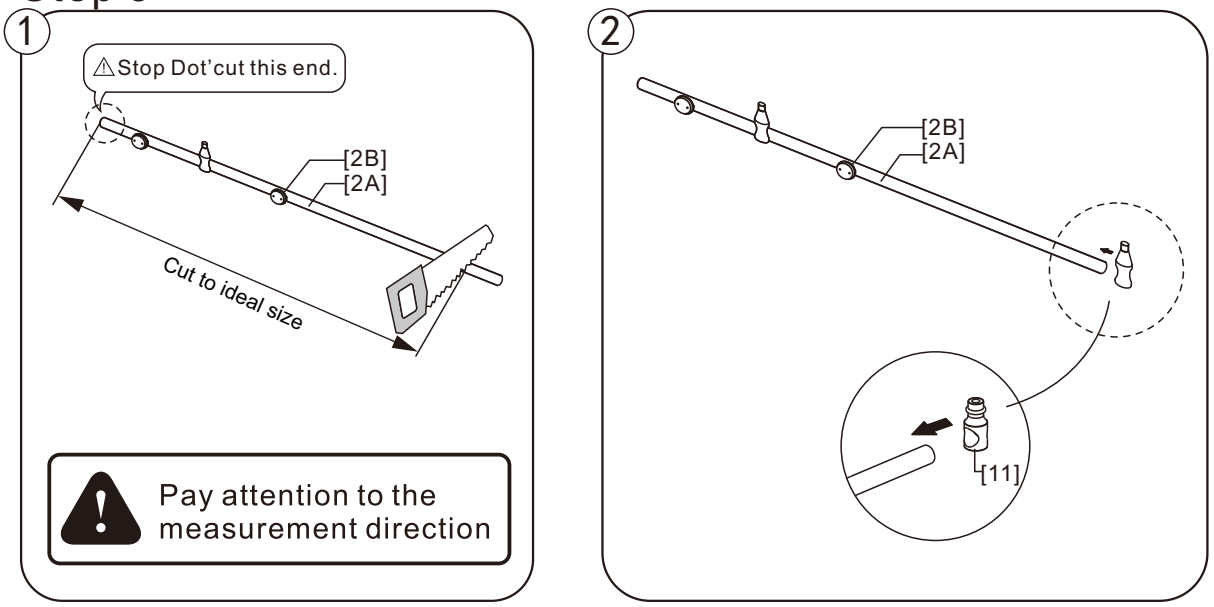

1
⚠Stop Dot'cut this end.
[2B]
[2A]
Cut to ideal size
Pay attention to the measurement direction
2
[2B]
[2A]
[11]

Step 4

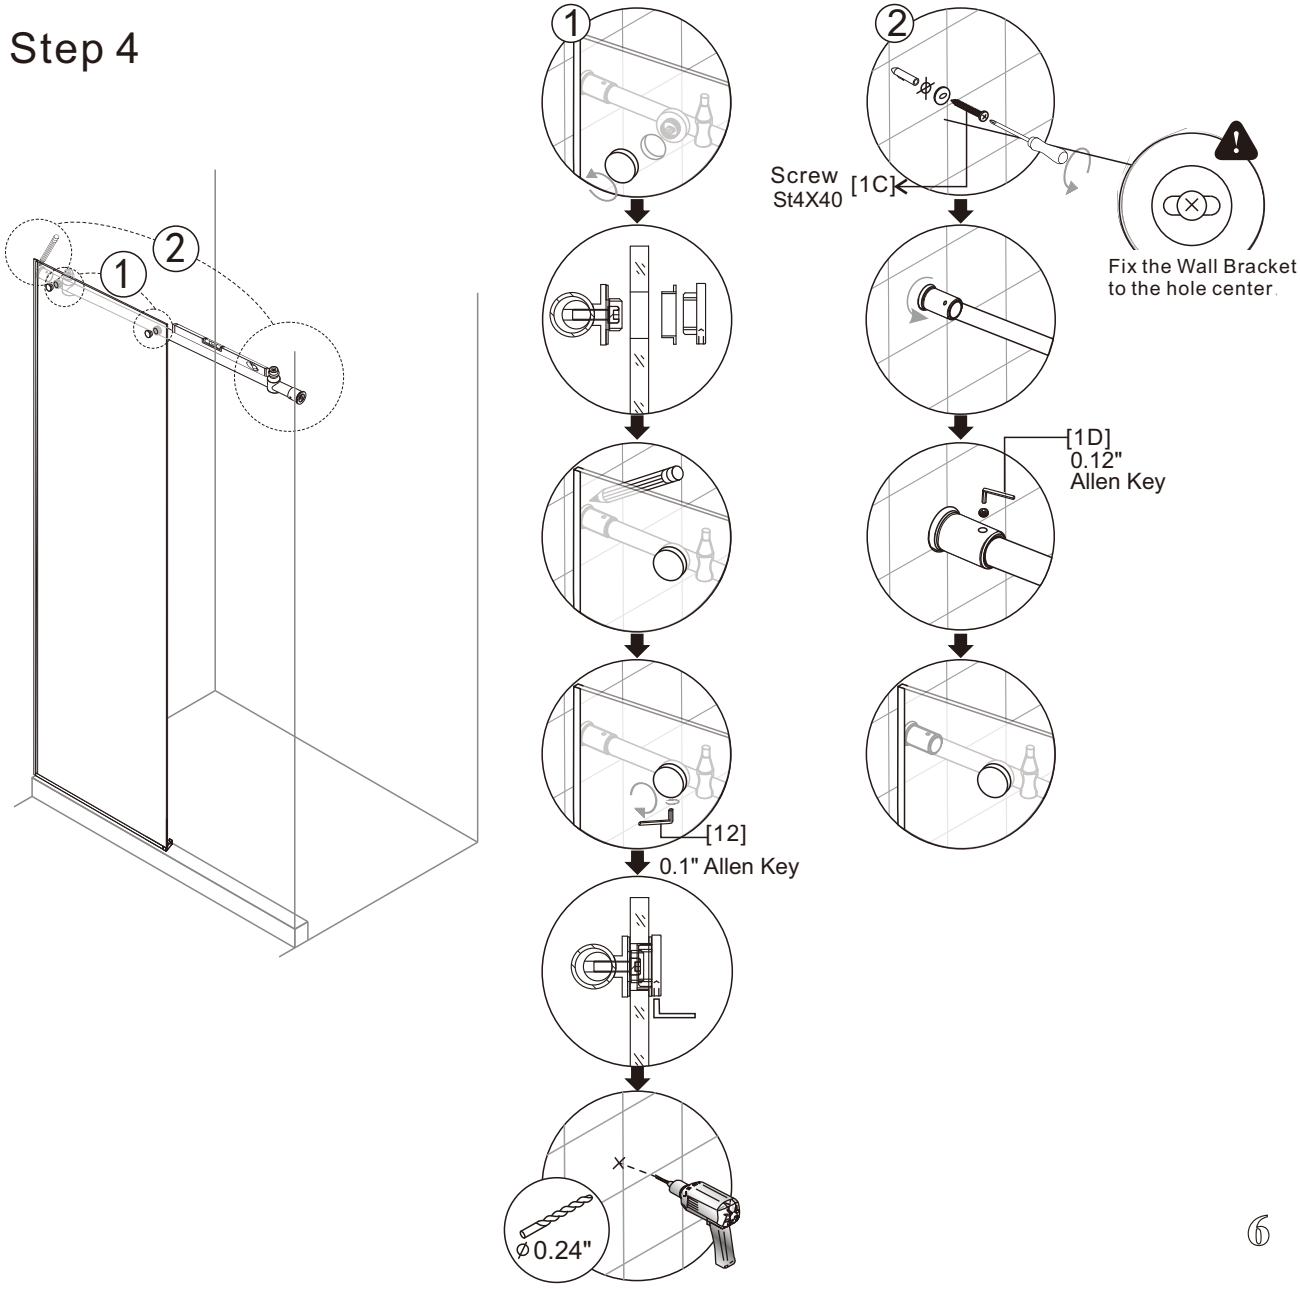
1
2
1
2
Screw St4X40 [1C]
Fix the Wall Bracket to the hole center
[1D] 0.12" Allen Key
[12]
0.1" Allen Key
ø0.24"


Step 5

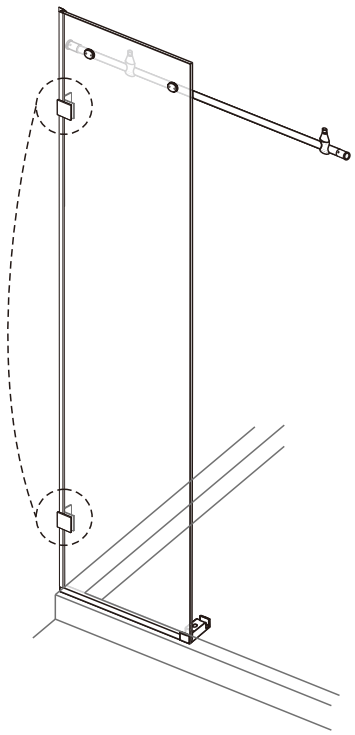


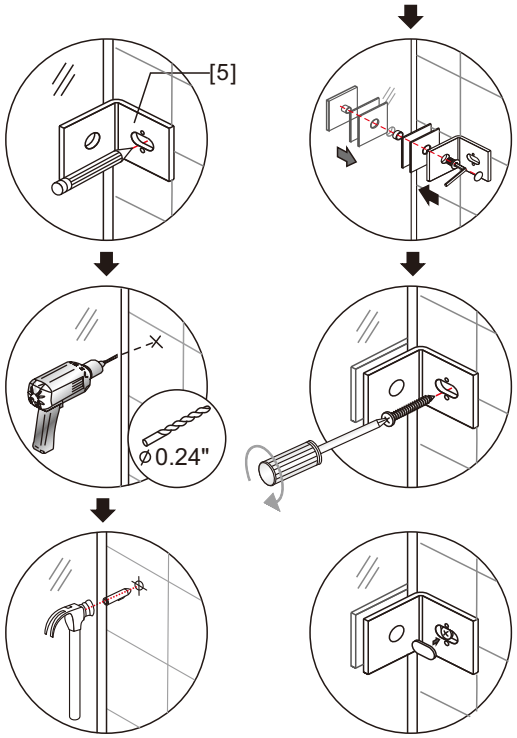

View from inside


Step 6

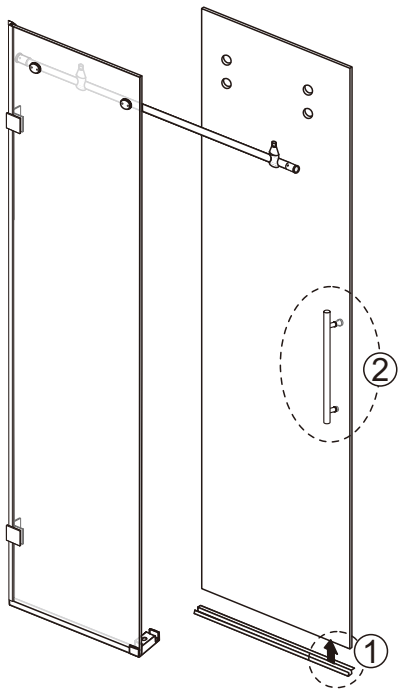


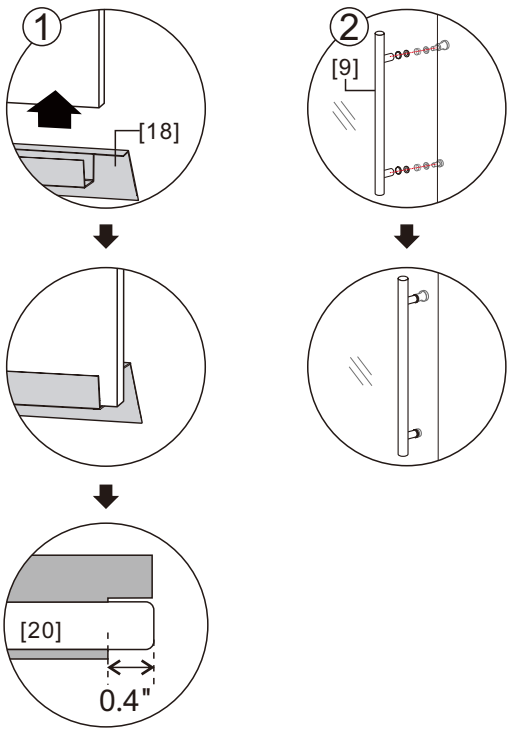


TOP VIEW


Step 7

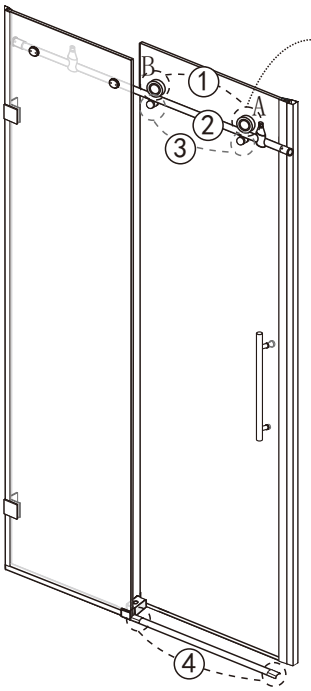


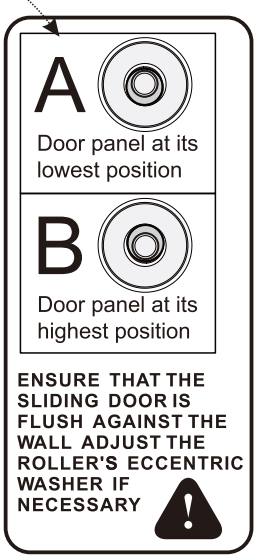

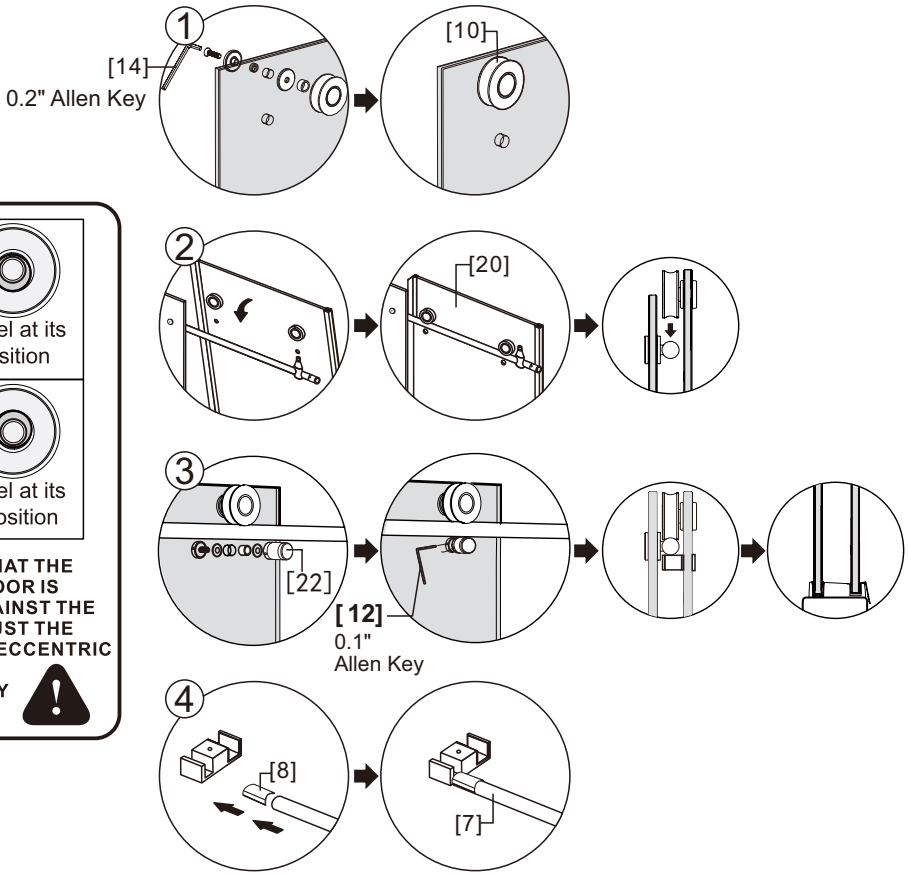


Step 8

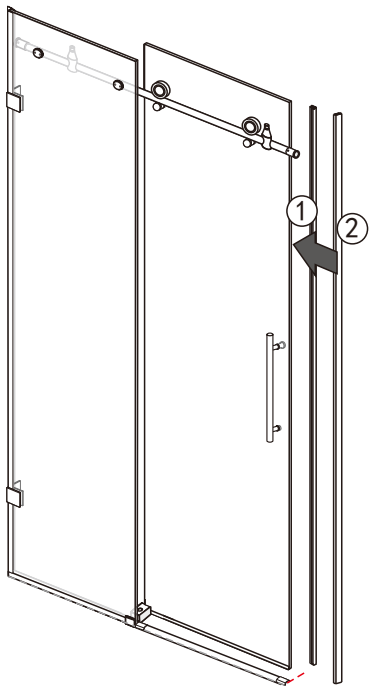


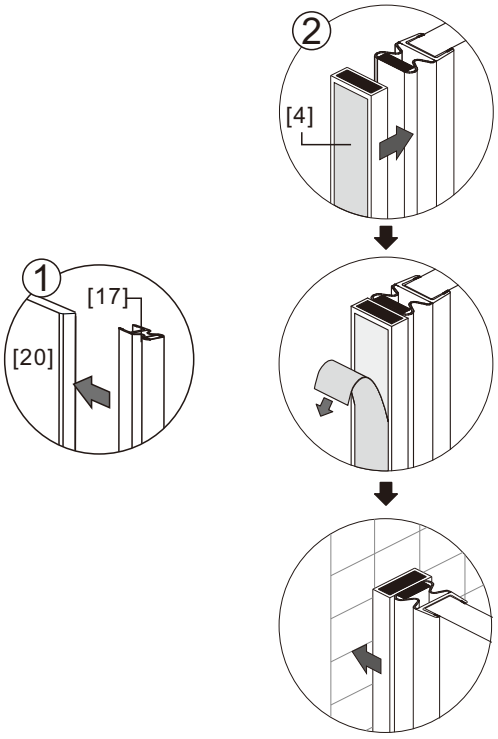


View from inside

Step 9

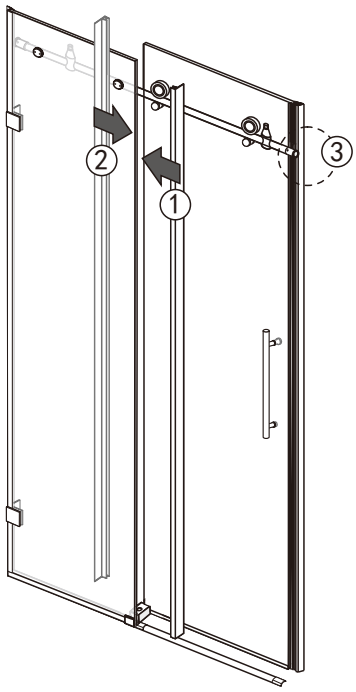

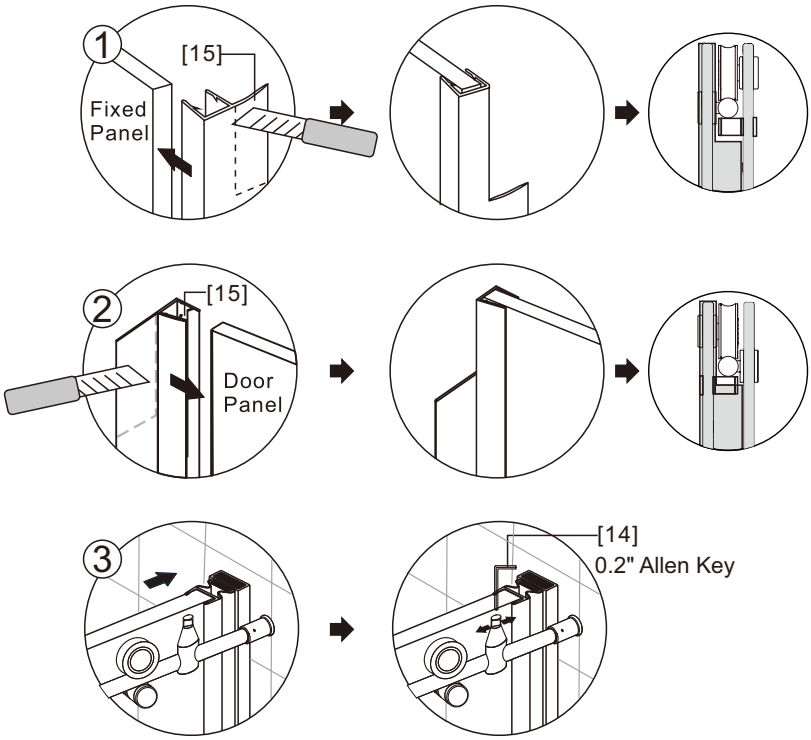

Step 10

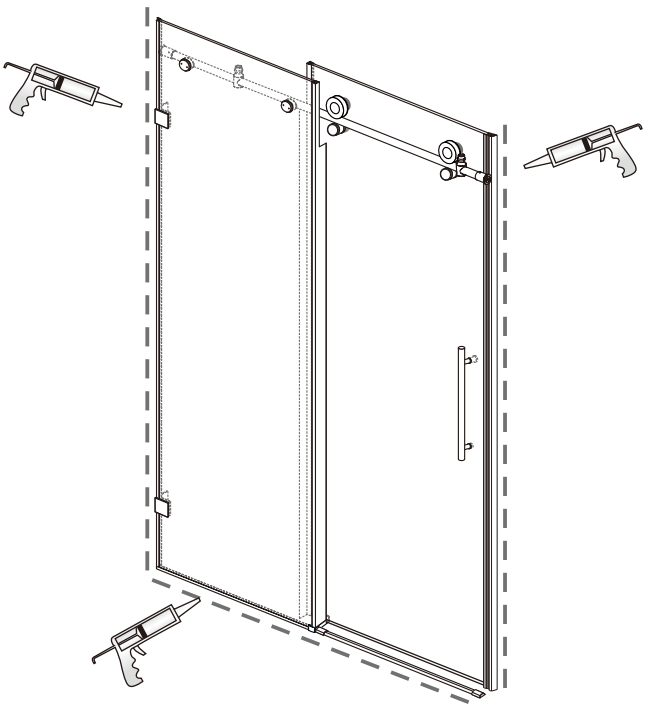





Allow 24 hours for silicone to dry before use.

	First	Then	Next	Last	Recommended
After Use	 Rinse glass with Warm Water	 Dry with Squeegee / Soft Cloth			Use after every shower
Regular Maintenance	 Rinse glass with Warm Water	 Spray with 30% vinegar plus 70% water	 Rinse glass with Warm Water	 Dry with Squeegee / Soft Cloth	Weekly
Not to use	Avoid & Do Not use harsh, abrasive cleaners, scouring powders, pads, highly acidic/ cleaners can damage glass surface				